



REQUIRED PARTS FOR THIS CHAPTER:


ALL PARTS IN THE BOX BELOW ARE INCLUDED WITH THE PRODUCT

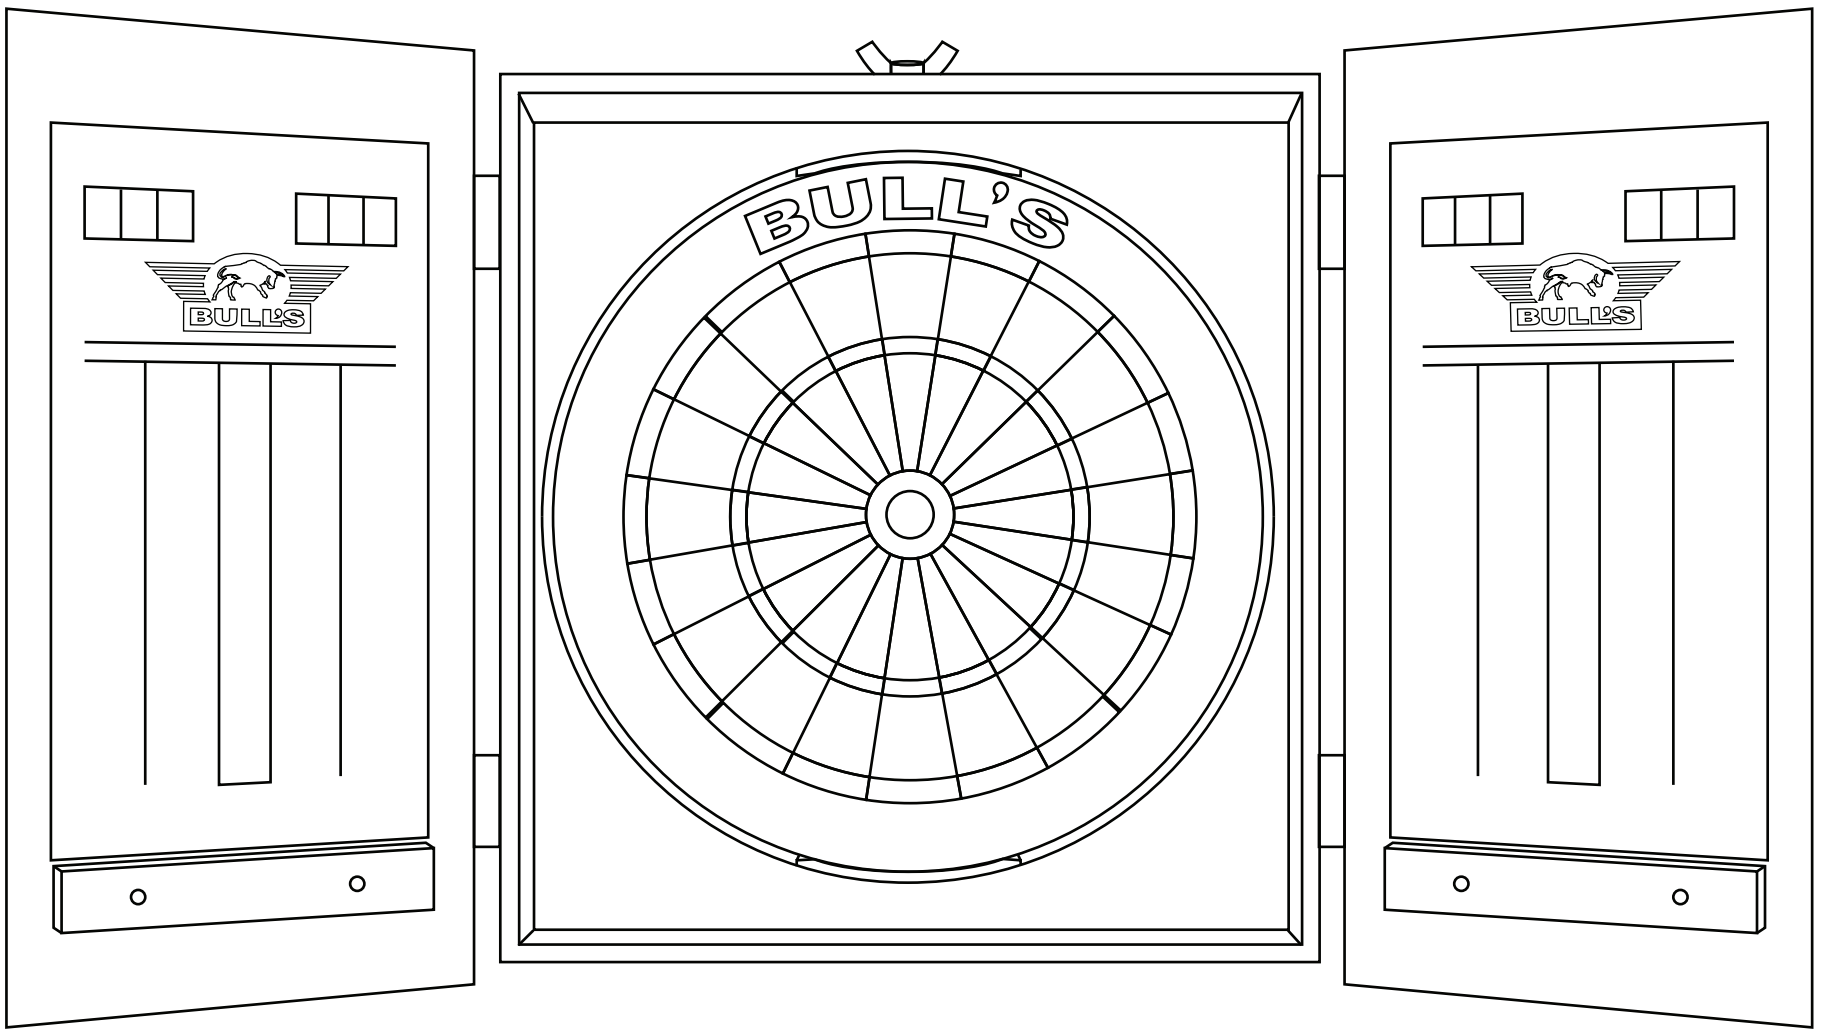


1x

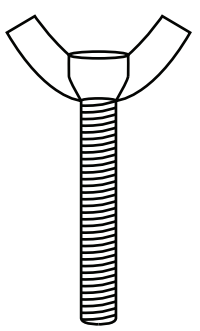

1x

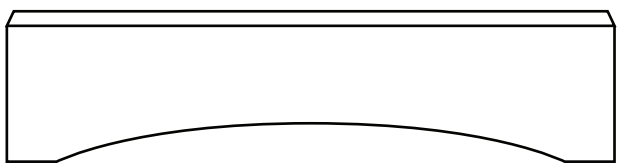


2x

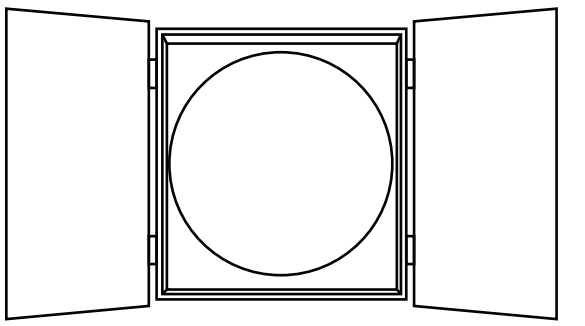


1x


USE THE HOLE ON TOP OF THE CABINET
TO SECURE THE SCREW AND SCREW BOLT
TOGETHER

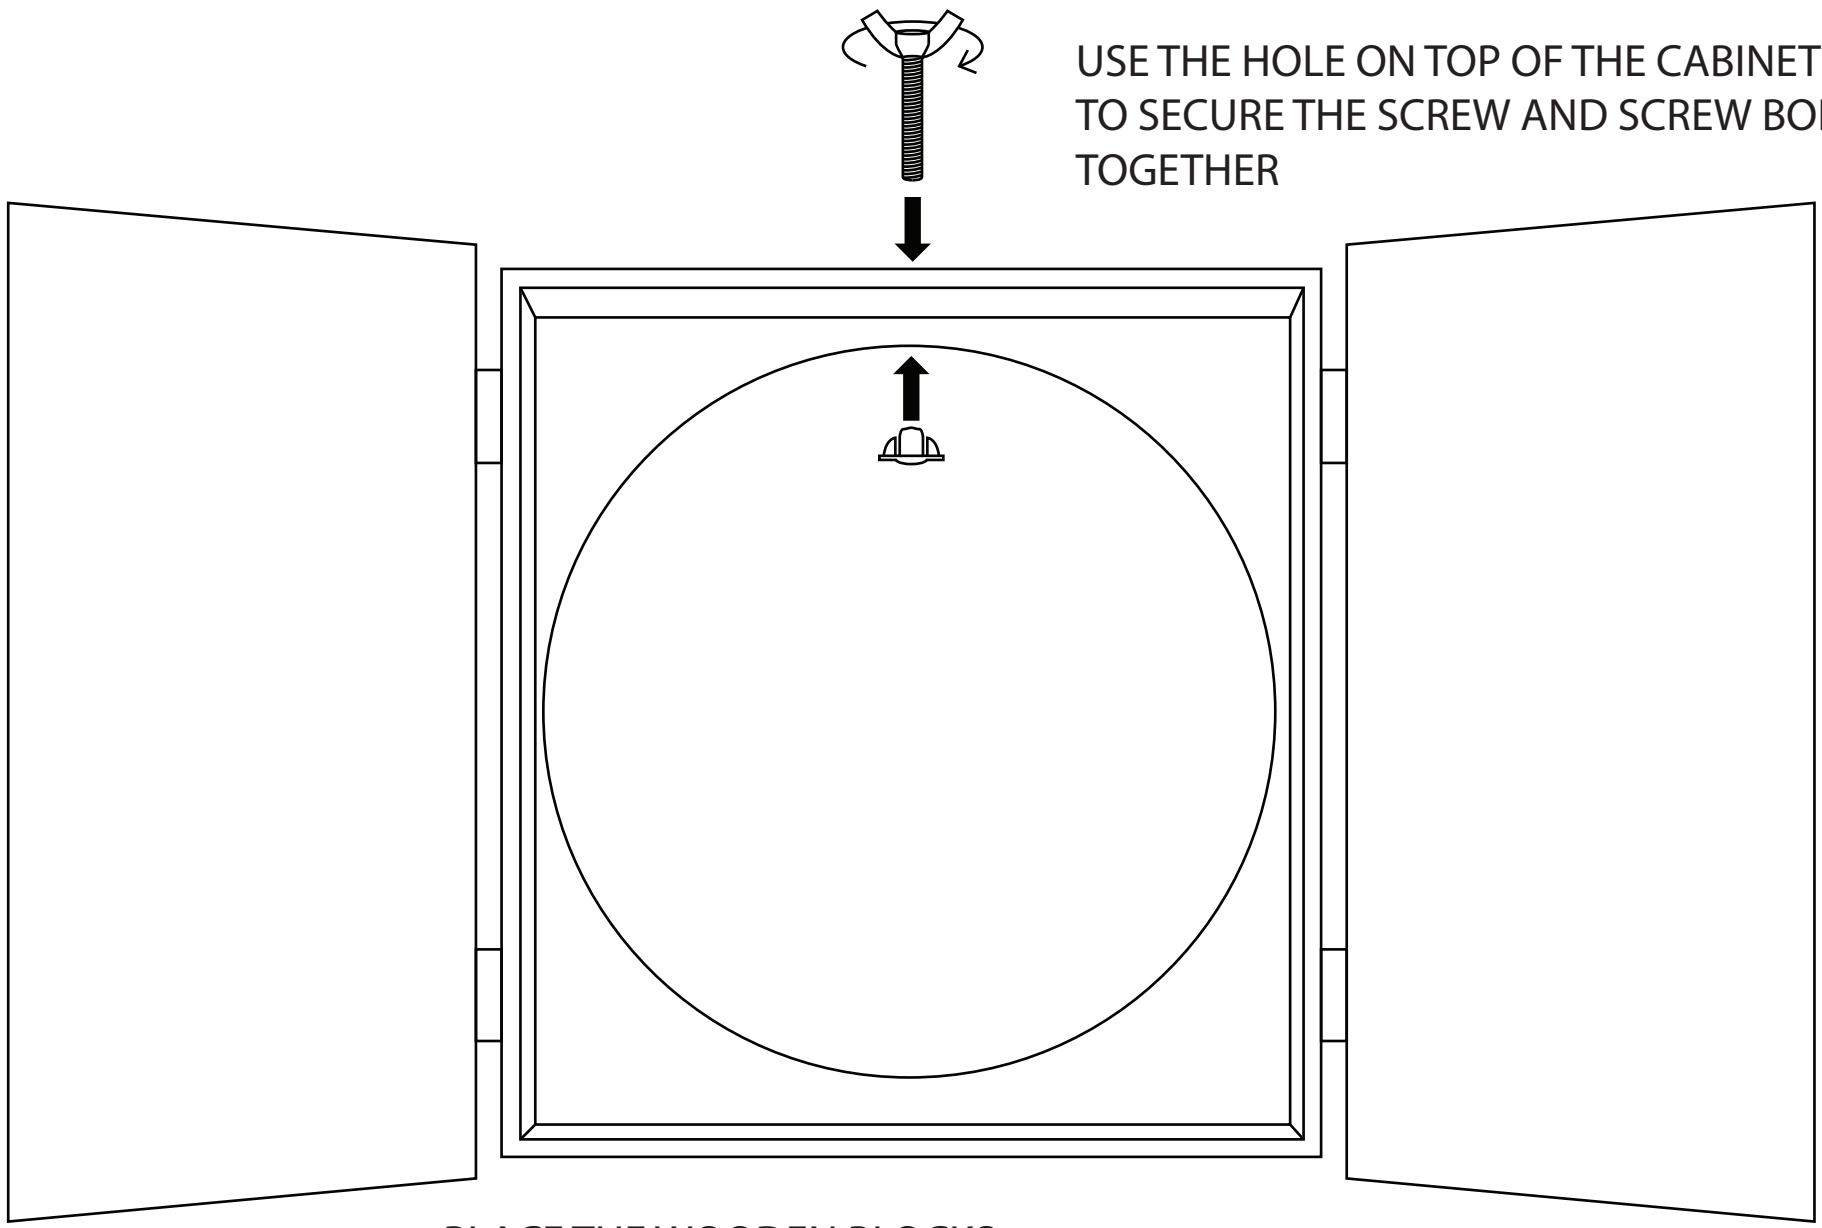


PLACE THE WOODEN BLOCKS
INSIDE THE CABINET

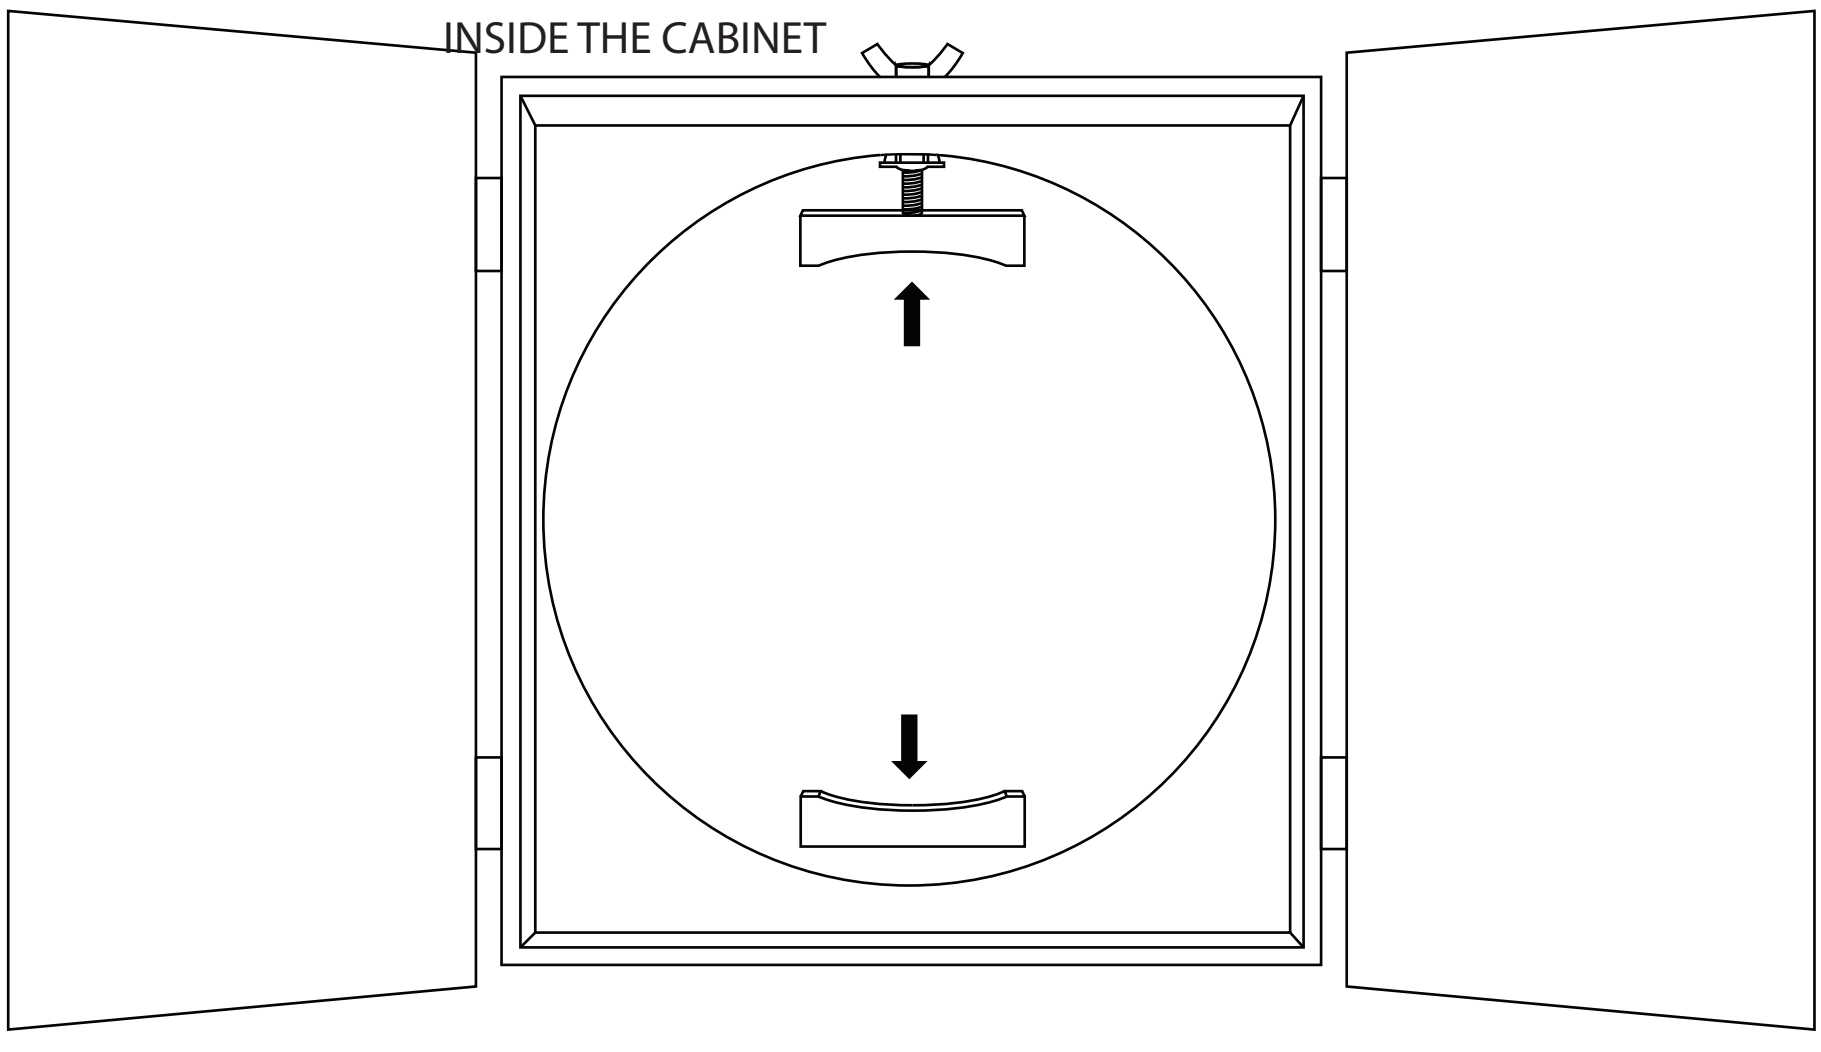


USE THE EMPTY SPACE ON THE UPSIDE AND DOWNSIDE OF THE CABINET
TO PLACE THE WOODEN BLOCKS

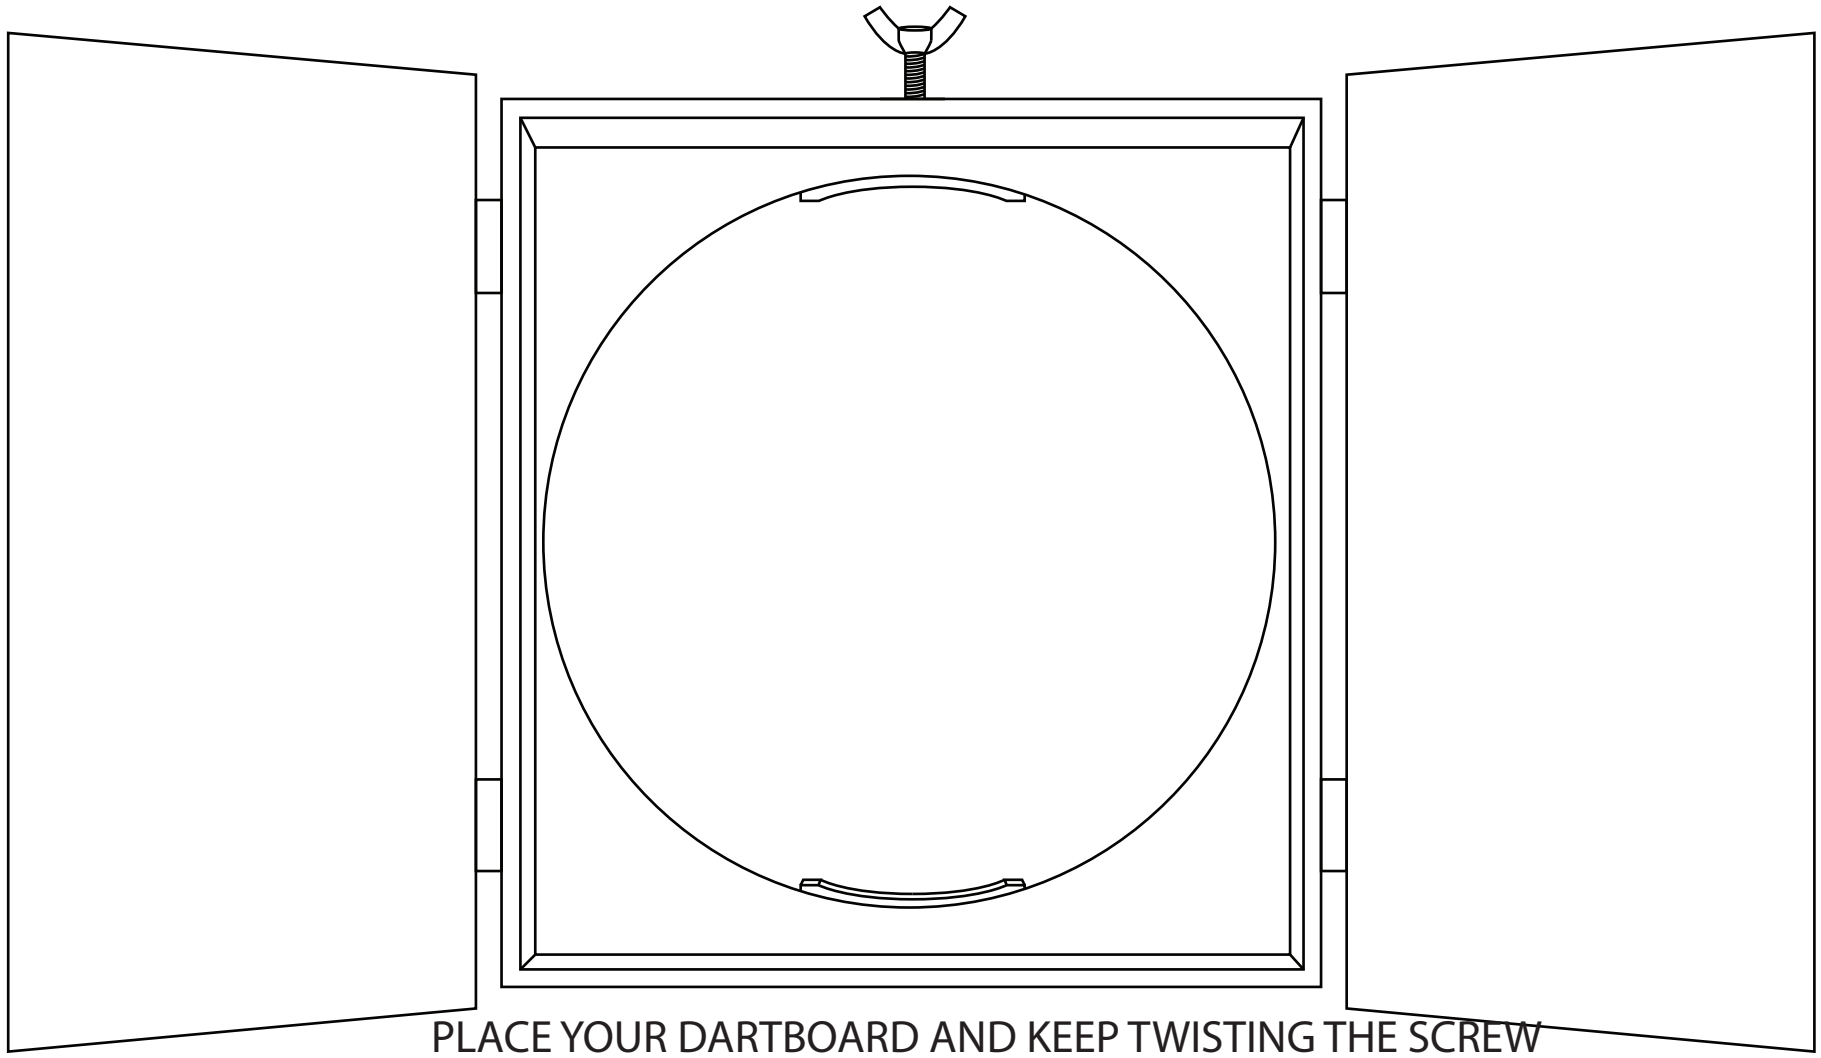


PLACE YOUR DARTBOARD AND KEEP TWISTING THE SCREW
TO TIGHTEN THE BOARD SECURELY IN PLACE

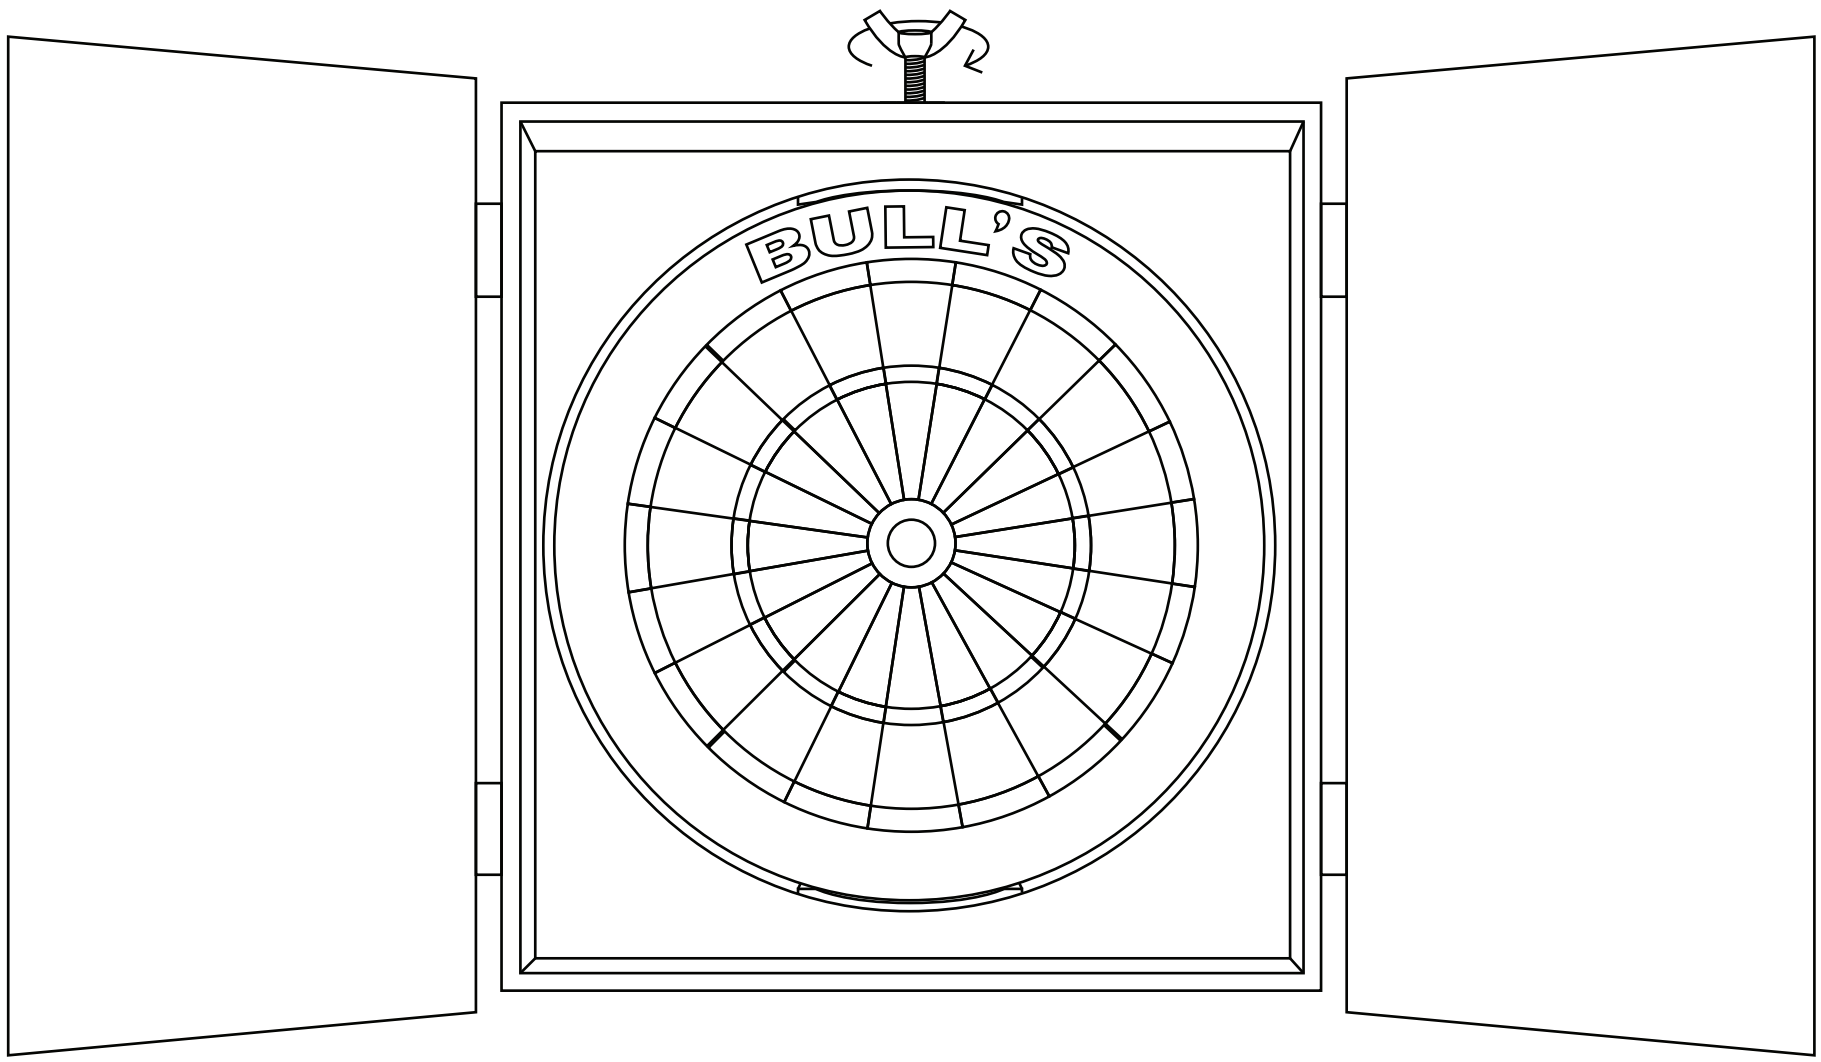

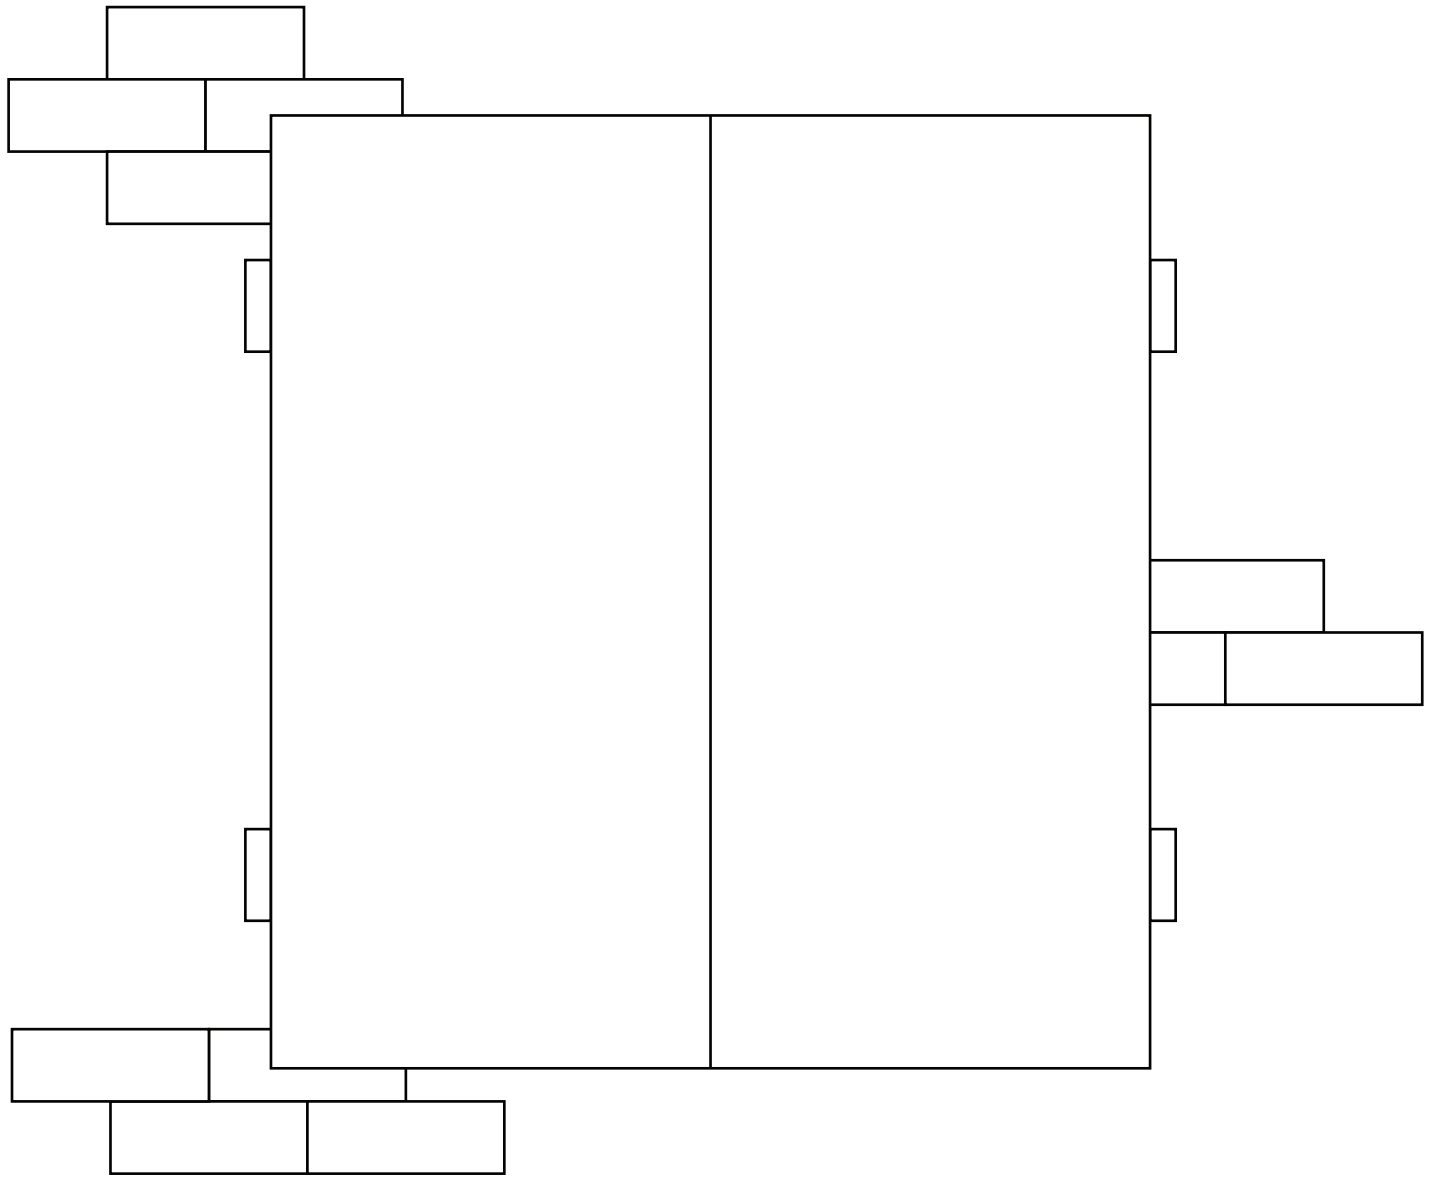


REQUIRED PARTS FOR THIS CHAPTER:


ALL PARTS IN THE BOX BELOW ARE INCLUDED WITH THE PRODUCT



2x




2x

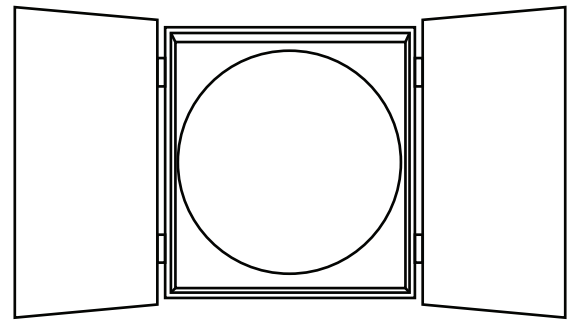



1x


USE A 6 MM DRILL TO CREATE TWO HOLES 462 MM APART FROM EACH OTHER (HORIZONTALLY), AT A WALL AT YOUR DISCRETION. USE THE MEASUREMENTS AT THE LAST PAGE OF THIS GUIDE.

USE THE INCLUDED WALL PLUGS TO PLUG UP THE HOLES AND SECURE THE SCREWS INTO THE WALL PLUGS. MAKE SURE THE SCREWS STICK OUT FROM THE WALL SLIGHTLY TO ALLOW THE CABINET TO HANG ONTO.

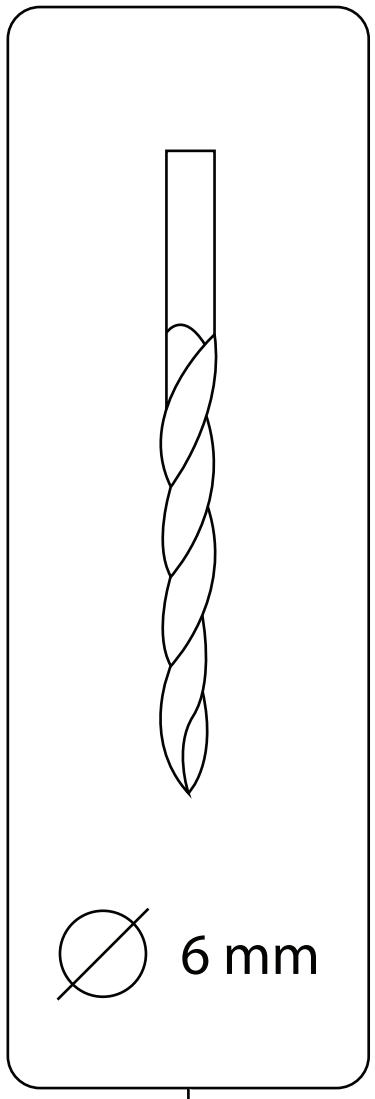

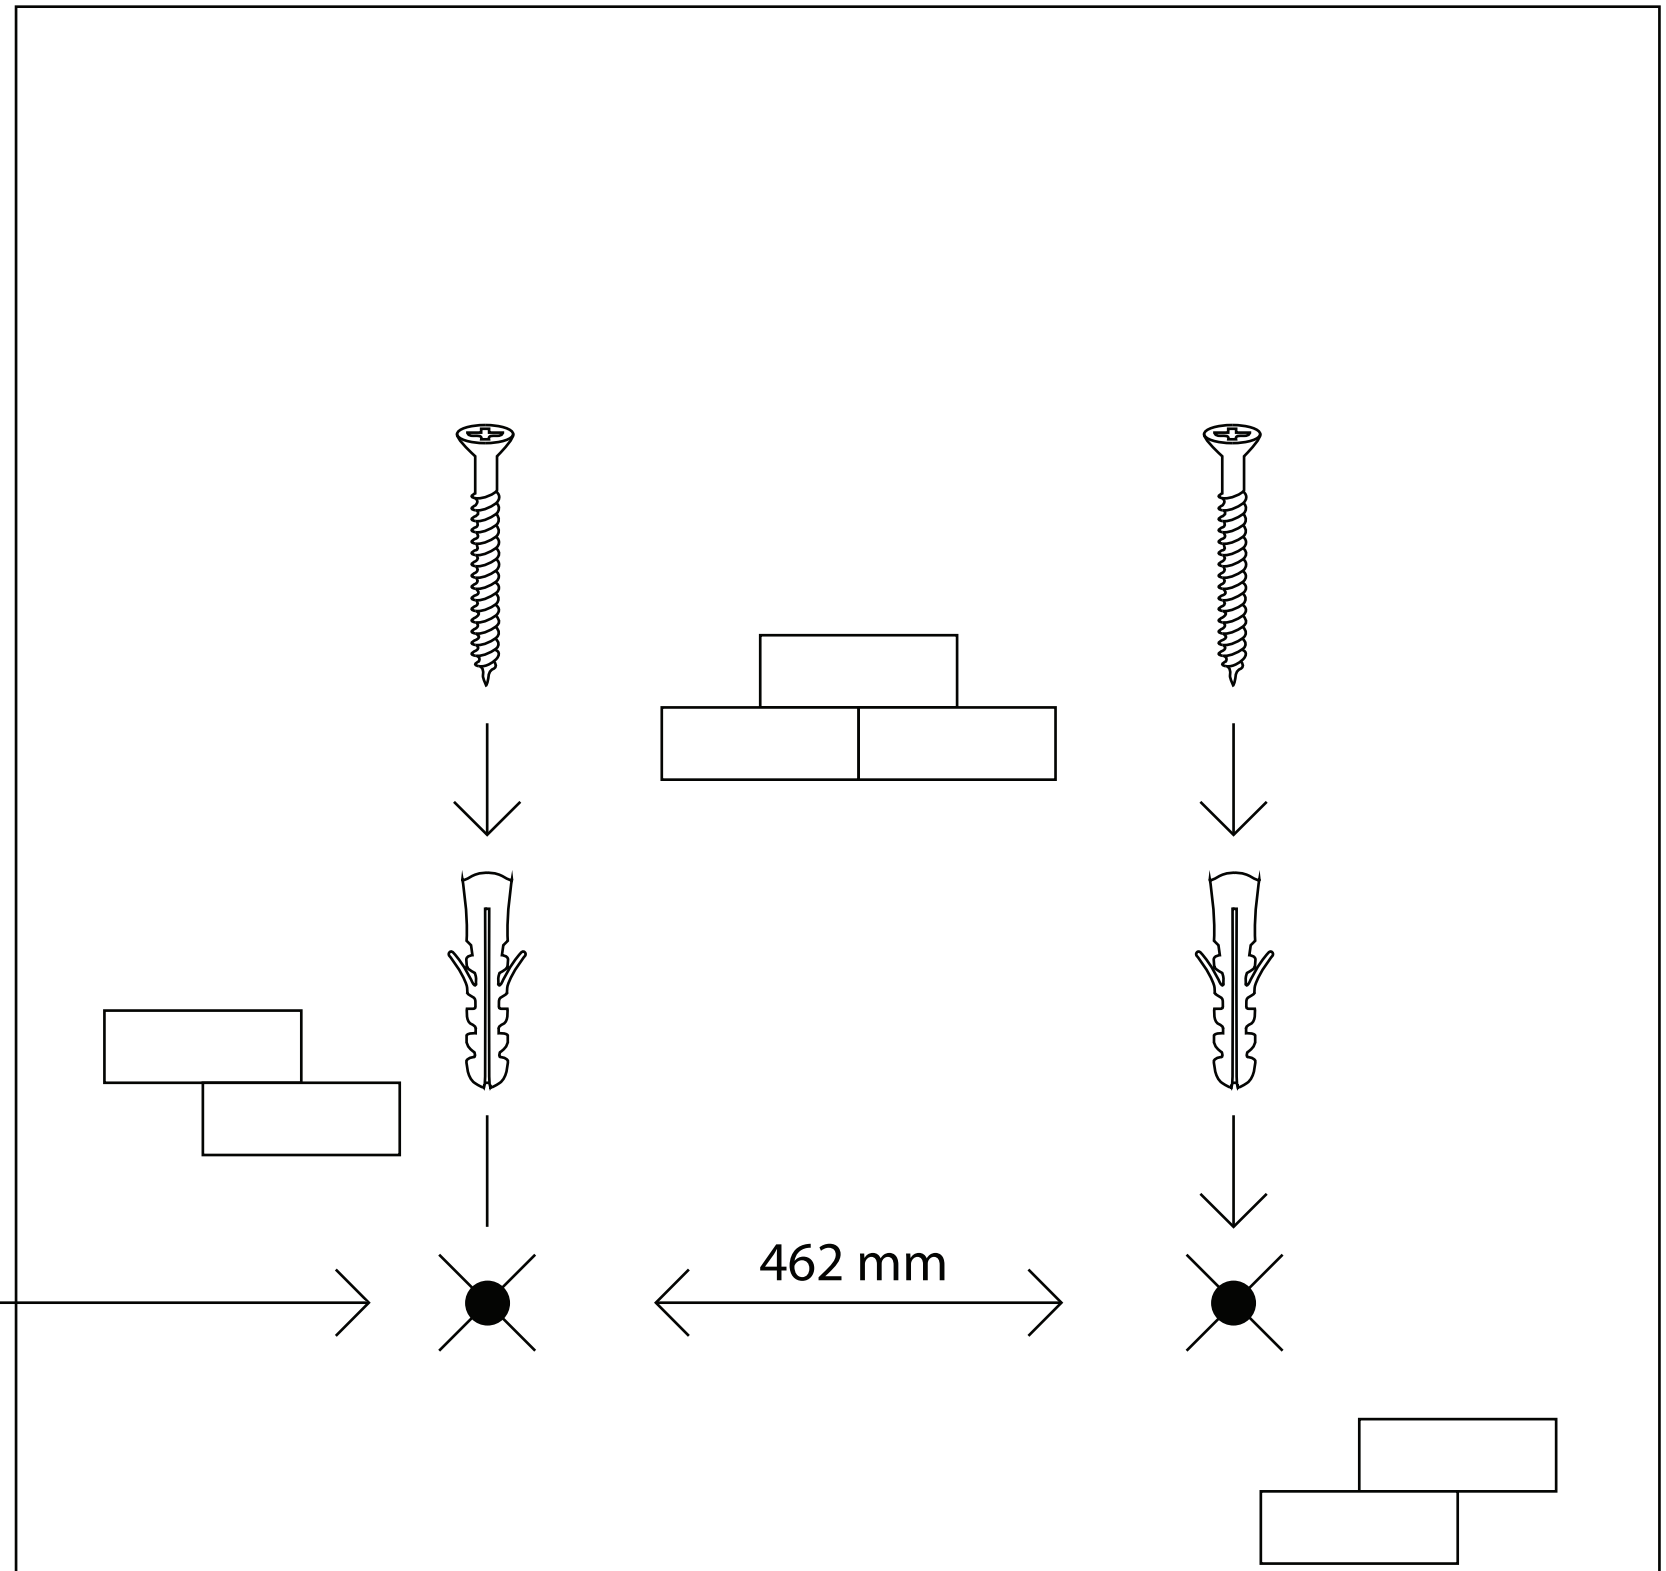

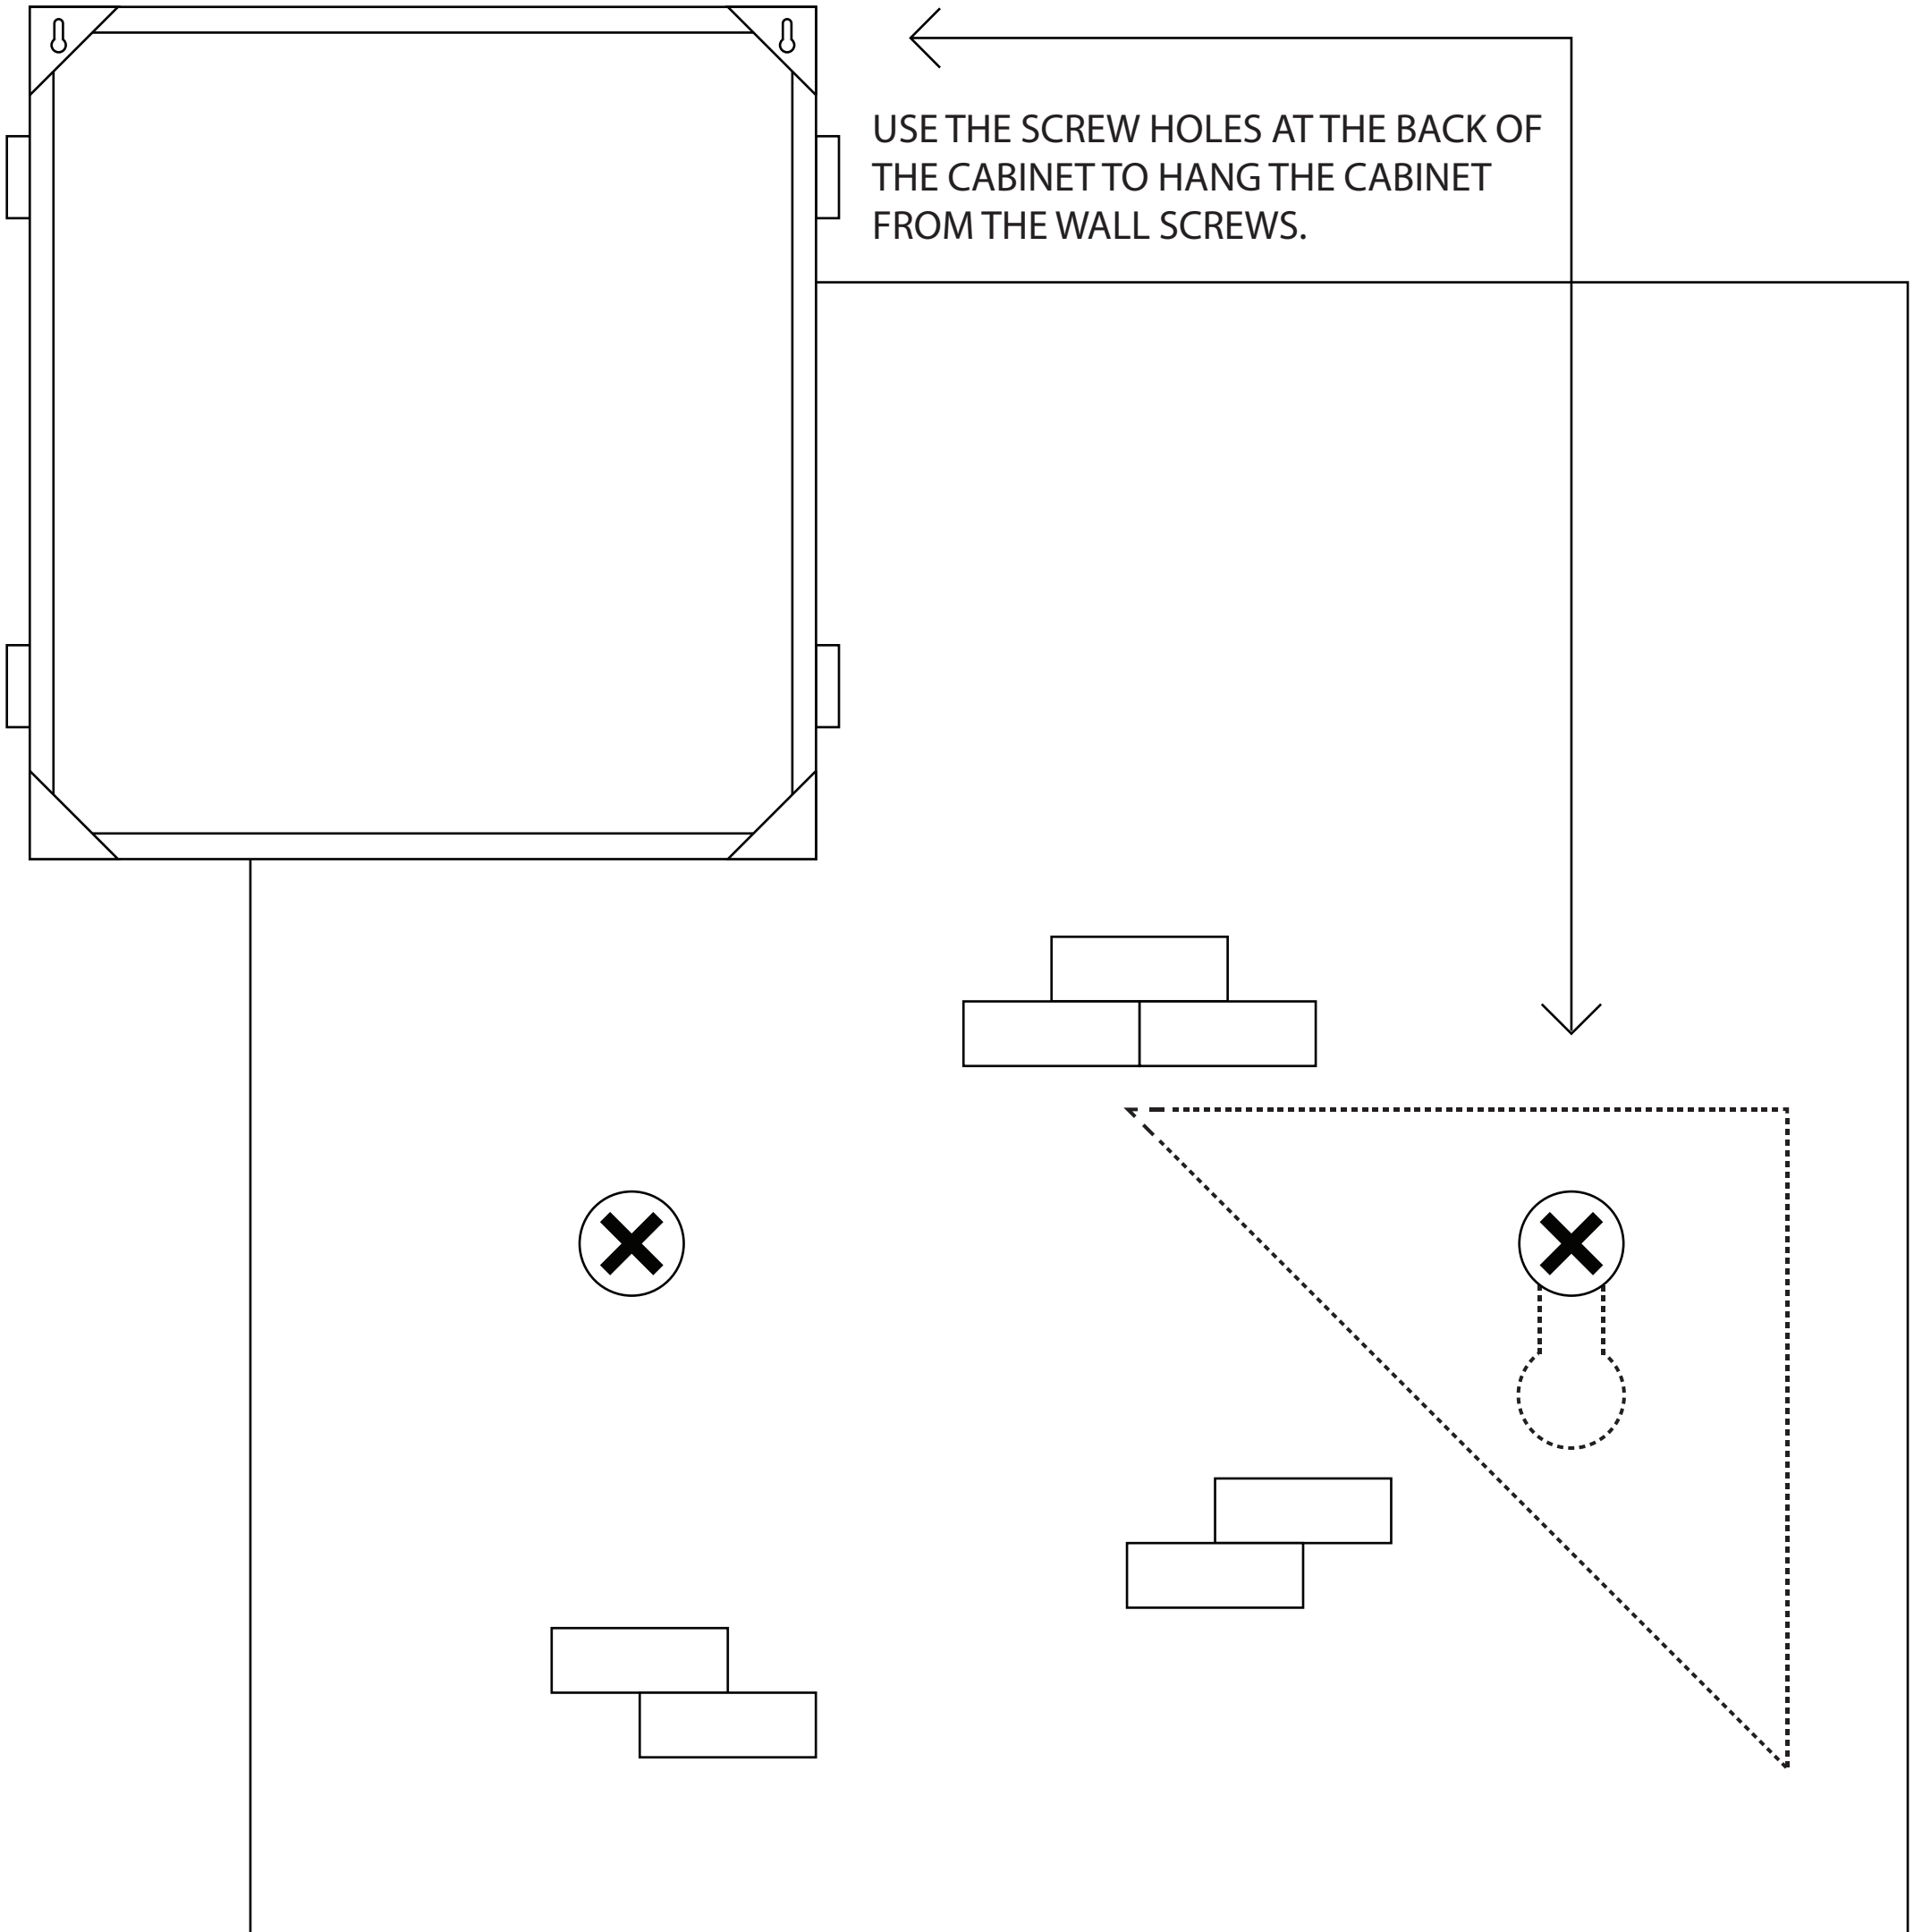
USE THE SCREW HOLES AT THE BACK OF THE CABINET TO HANG THE CABINET FROM THE WALL SCREWS.

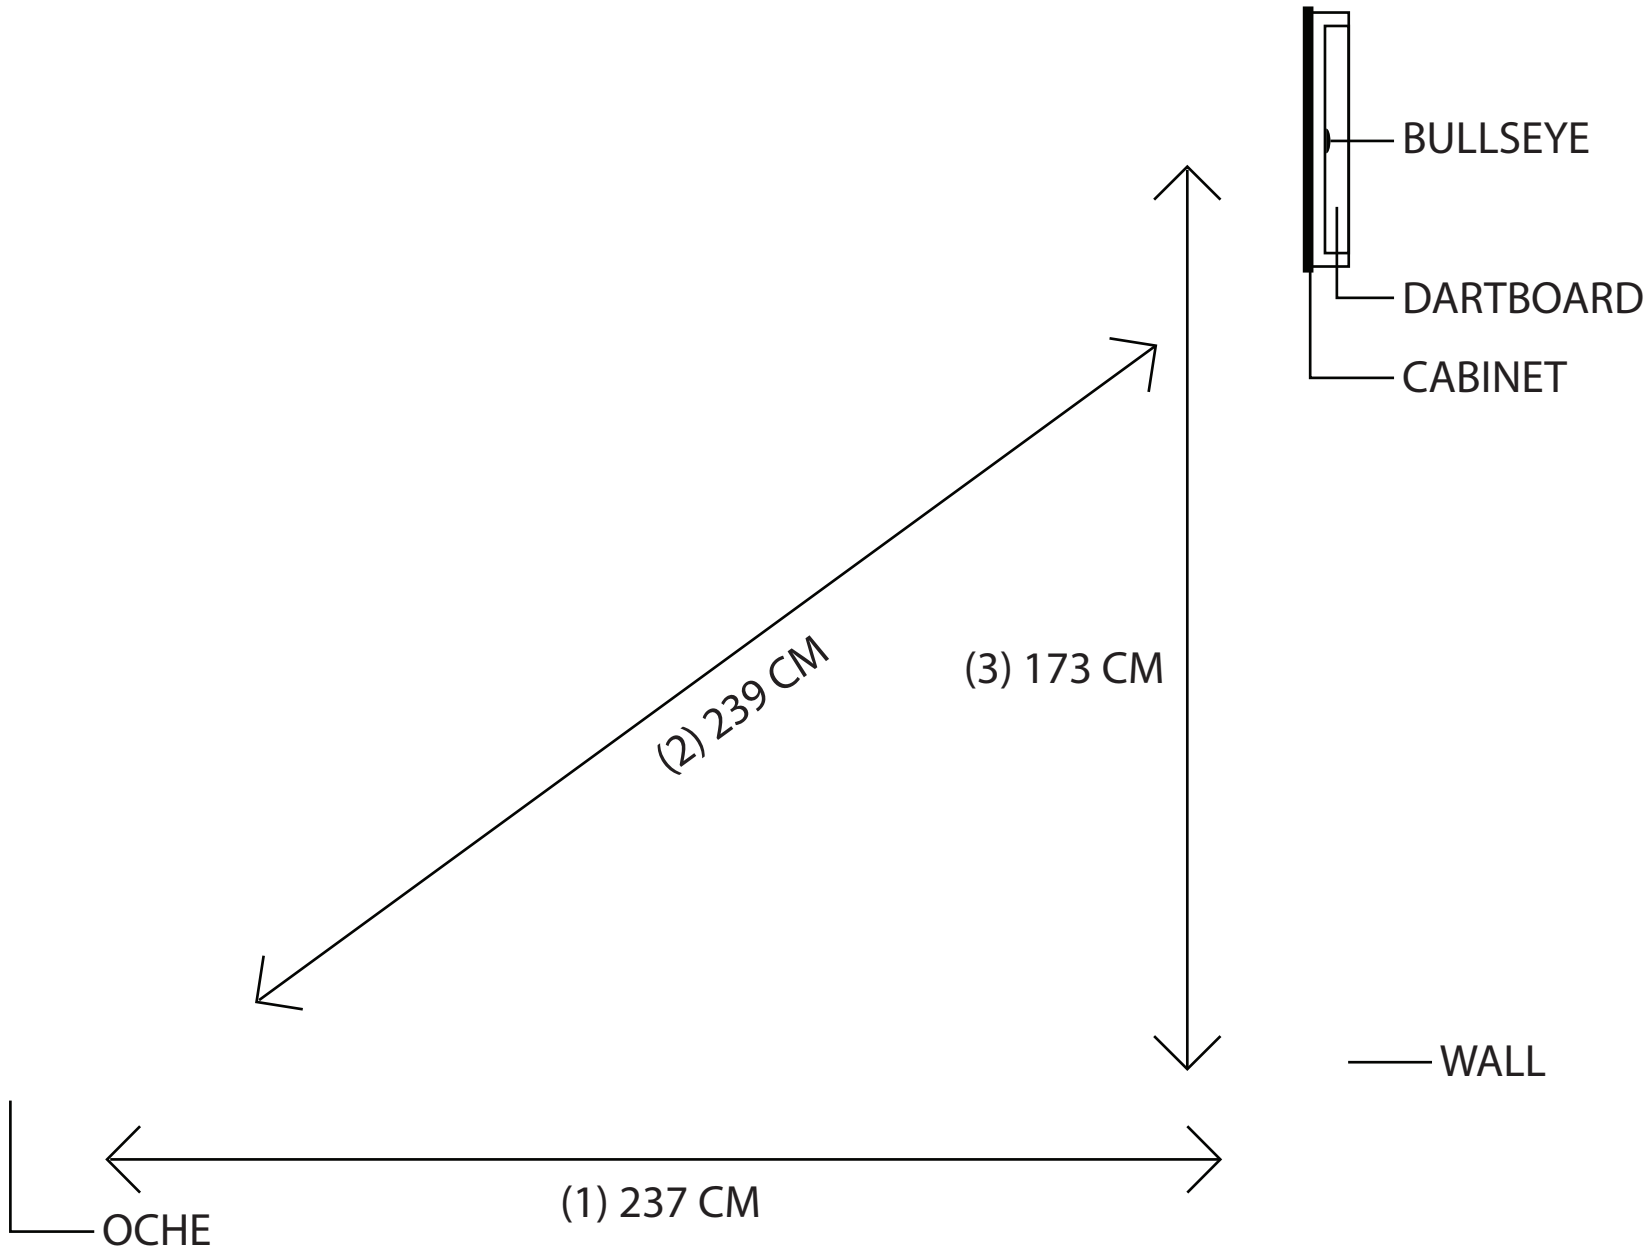


(1) THE DISTANCE BETWEEN THE FRONT OF THE BOARD AND THE OCHE SHOULD HORIZONTALLY BE 237 CM

(2) THE DISTANCE BETWEEN THE BULLSEYE AND THE OCHE SHOULD DIAGONALLY BE 239 CM

(3) THE DISTANCE BETWEEN THE FLOOR AND THE BULLSEYE SHOULD VERTICALLY BE 173 CM

DELUXE**CABINET**

INSTALLATION GUIDE

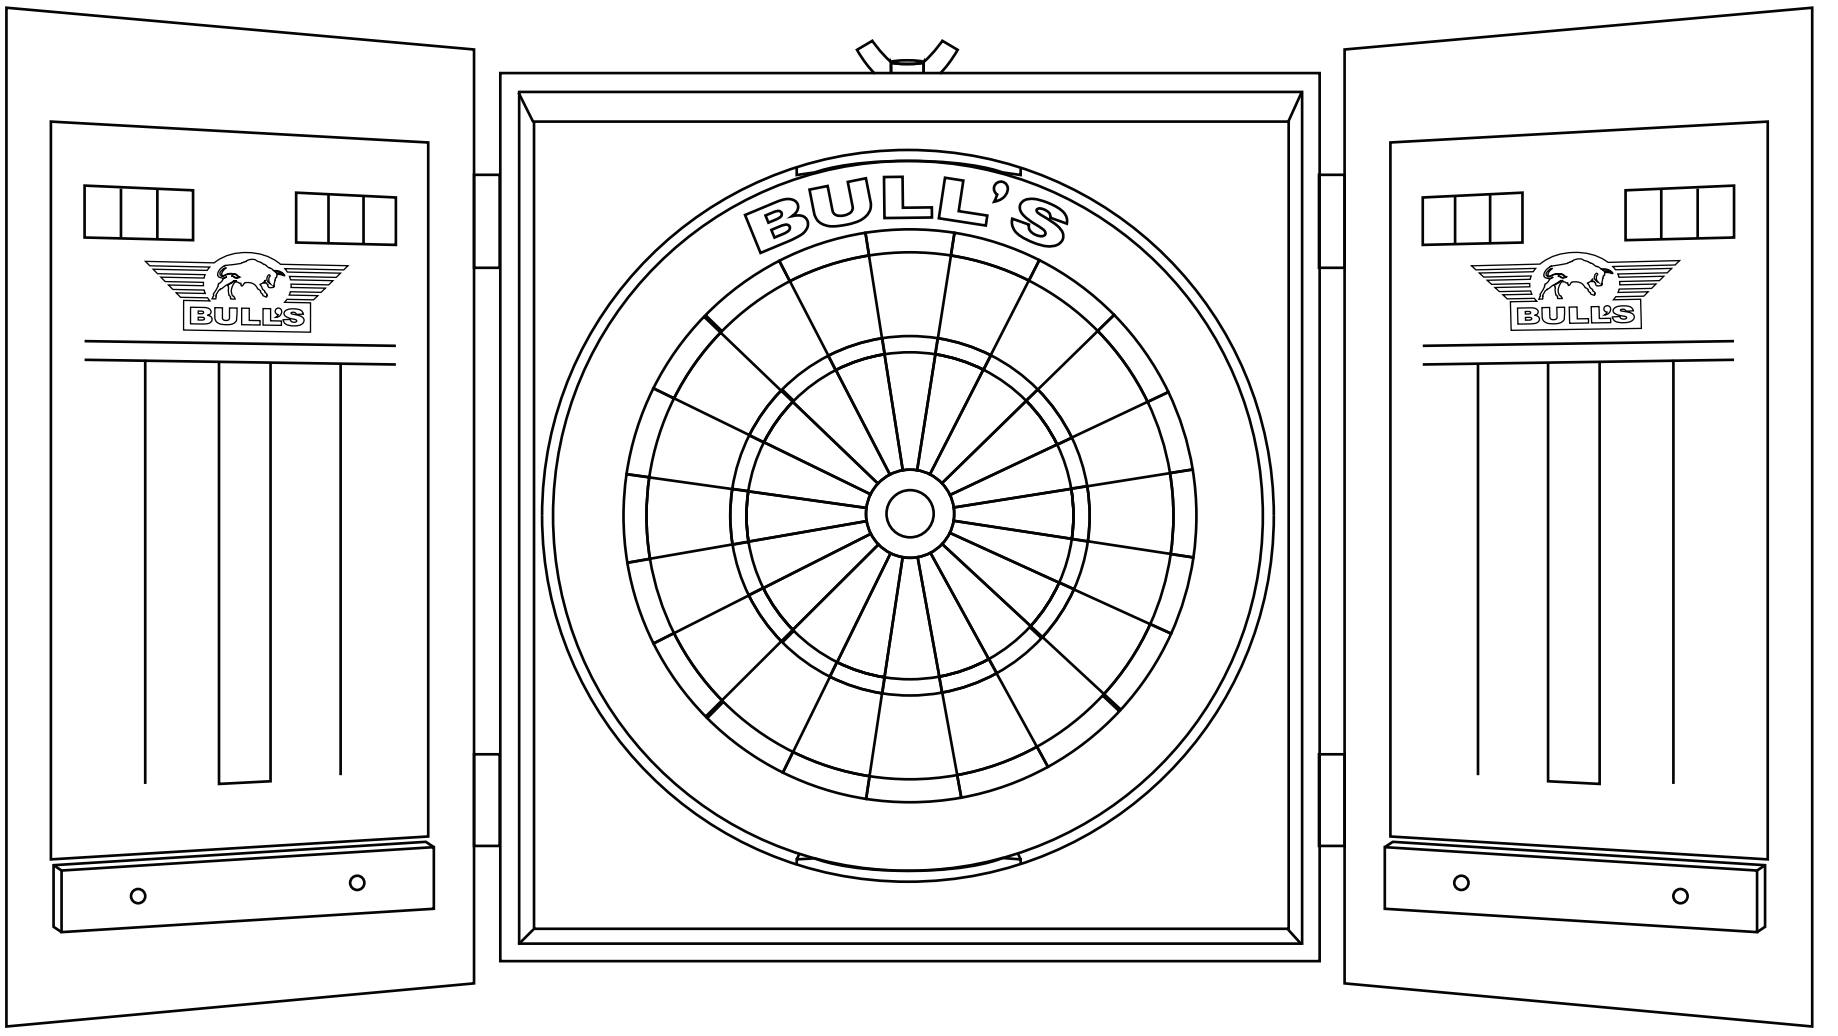

WWW.**BULLS**.NL